

# RATFLAP PIPE SIZER

To determine your pipe size, print this page, in A4, cut out carefully along the red line. Following the arrow on the bottom of the cutout, place into the suspected problem pipe. Which ever section goes into the pipe last is Ratflap size you should order. When printing use 100% scaling in print options to ensure this cutout is the correct size.

